




EnCore



User Instructions

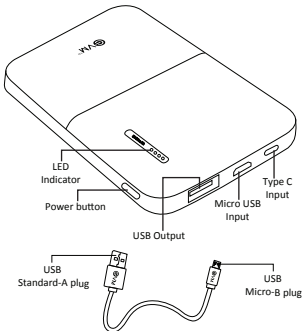

SPECIFICATIONS:

- Capacity = 5000mAh
- Battery Type = Li-Poly
- Input (Type C) = DC5V/2.0A
- Input (Micro) = DC5V/2.0A
- Output = 5V/2.4A (MAX)
- Model no.: EVM P0044

Parts List

- Power bank
- Micro USB Cable
- User Manual

SAFETY MEASURERS:

- The battery should be charged at least every three months to avoid shortening the battery life.
- Keep the Mobile Power Bank away from fire and avoid temperatures above 140°F (60°C) when not in use or 113°F (45°C) when in use.
- Do not get the Mobile Power Bank wet or immerse it in water.
- Do not wash the Mobile Power Bank with corrosive cleaner.
- Do not attempt to disassemble, modify or fix the Mobile Power Bank.
- Do not use a damaged cable or power charger to charge the Mobile Power Bank.
- Please recycle this device at an appointed disposal location for batteries.
- Store power bank in a cool and dry place.
- Do not store power bank in hot or humid environment.
- Operating temperature should be between -10c to 45c.
- When charging a device, the power bank may feel warm, this is a normal operating condition and should not be cause for concern.

HOW TO USE:

How to charge the power bank:

- Charge via computer or adapter with USB port.
- The LED indicators will flash during the charge cycle.
- All LED indicators will light up when the power bank is fully charged.
- Each light signifies 25% capacity.

Percentage	LED 1	LED 2	LED 3	LED 4
Full	On	On	On	On
99 - 66 %	On	On	On	Off
66 - 33 %	On	On	Off	Off
33 - 1 %	On	Off	Off	Off
0 %	Off	Off	Off	Off

How to charge device from power bank:

- Turn on the power bank: Charging should start automatically once device connected
- Turn off the power bank: The power bank will turn off automatically after 20 seconds if it is not charging.
- Using your phone or other USB devices charging cable, connect the USB connector to the USB Output on the power bank, Connect the other end of the cable to your device.
- Use any cable compatible with your phone to charge your phone from Powerbank.
- If your phone or device uses a standard micro USB connector then you can also use the included cable to charge your device.
- When your phone or device is fully charged, the power bank will stop charging to prevent over charging or overheating.

WARRANTY:

The warranty service includes :

- This product comes with 2 year limited warranty & it begins from the date of purchase.
- Whether defective items or components are to be replaced or repaired shall be left to the sole discretion of **PIN PERIPHERAL PRIVATE LIMITED.**

Not included in warranty:

- The completion of maintenance, fall, neglect, abuse, liquid ingress, accident, breaking, or if the label and marking of device is spoiled.
- The warranty period has expired.
- Damage caused by force majeure.
- Damage that do not include in service included.
- Failure of the device or its components which arose in connection with the human factor, and which prevent to a normal operation.

COMPATIBLE WITH:

- Tablet PC, PAD, Mobile Phone, Smart Phone, PSP, NDS, MP3, MP4, MP5, Bluetooth, GPS, DV, Camera, Etc.
- All device that have USB Type-A plug at 1 end of the cable.



For Support

- www.evmzone.com
- Email : support@evmzone.com
- Contact No.: 18001020432





www.evmzone.com